

1 SETTING CLOCK AND DAY

This timer is fitted with a real time clock. It is essential that the clock time and day are set accurately if you require your programmed events to start on time. To set follow the steps below:

1. Touch the time display and the time will start flashing. Use the (+) and (-) buttons to set the time. By holding the button down the time will change faster.
2. Press (>) to move to the Day setting and use the (+) and (-) buttons to get to the correct day.
3. Press DONE to store and exit.

MENU FEATURE - Basic Menu

1.Clock Format

You can select the clock to show in either 12 or 24 hour time.

2. 5 + 2 / 7 Day Mode

This allows you to program either 5 days at once, then the 2 days of the weekend separately, or a full 7 days at the same time, or 7 days separately.

01 = 5+2 day programmable

02 = 7 day programmable

MENU FEATURE – Advanced Menu

In menu 02, press and hold top right corner of the screen for about 5 seconds, you will see menu 03. Press (>) to move to the next Menu.

3. Modes

00 = Manual Mode 01 = Auto Mode

4. Direction of Installation

P = Portrait L = Landscape

2 OPERATION

Auto Mode

This timer has the ability to programme each individual day of the week separately or programme 7 days of the week at once. You can also programme weekdays (5 days) to one schedule and then weekends (2 days) to a different schedule.

Sample schedule

PROGRAM	START TIME	SET POINT
01	WAKE 07.00	ON
Set to the time you would like to wake to and the temperature you want during the morning, until you leave for the day.		
02	LEAVE 09.30	OFF
Set to the time you leave home and the temperature you wish your home to maintain while you are away at work perhaps.		
03	RETURN 16.30	ON
Set to the time you return home at the end of the day and the temperature you want during evening until bed time.		
04	SLEEP 22.30	OFF
Set to the time you return home at the end of the day and the temperature you want during evening until bed time.		

To modify the schedule:

1. Press SCHEDULE and the day display will start flashing. Using the arrow to select the day you wish to programme. Then press (>) . (If your timer is set to 5+2 day programmable mode, the programming will skip to step 3.)
2. To select every day to follow the some program simply press All Days. Press (>).
3. The LCD screen will show scheduled programme 1 (P1). This is the first programme function of the day.
4. The default start time for the scheduled program is now flashing. Adjust the time programme 1 event it should commence. Then press (>).
5. The temp is now flashing. Set the temp that you want the floor to heat to during schedule programme 1 event.

3 AUTO/MANUAL MODE

Use mode button to switch between Auto/Manual Mode.

In Manual mode the timer maintains a constant set status manually set by the user. Touch ON or OFF on the screen and use + - to adjust.

In Auto mode the timer executes the pre-programmed schedules.


4 LOCK THE KEYPAD

To lock the keypad, press and hold the top left corner of the display for 5 seconds. You will see LOCKED on the screen. To unlock, repeat the steps above and the symbol will disappear.


5 RESET TO FACTORY SETTINGS

With thermostat turned off, press and hold (OFF) for 5 seconds until you see -:- on the LCD screen.

Product name: Timer
Model: TS8100W-TIM-US
Input: 230-240VAC 50Hz
Output: 230-240VAC 16A

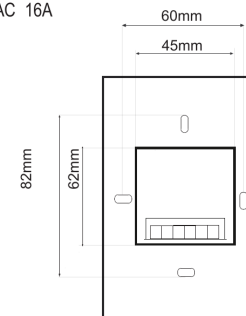

TS8100W-TIM-US

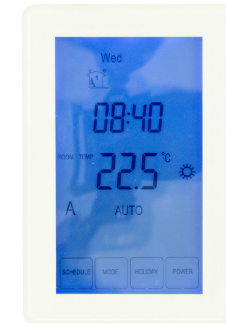

Large colour touch screen



5+2 / 7 day schedules



Vertical / horizontal models



elenni
Kitchen & Bathroom Collection

www.elenni.com.au
customerservice@elenni.com.au
Contact us 07 32099644
1 Bryants Rd, Loganholme QLD 4129