
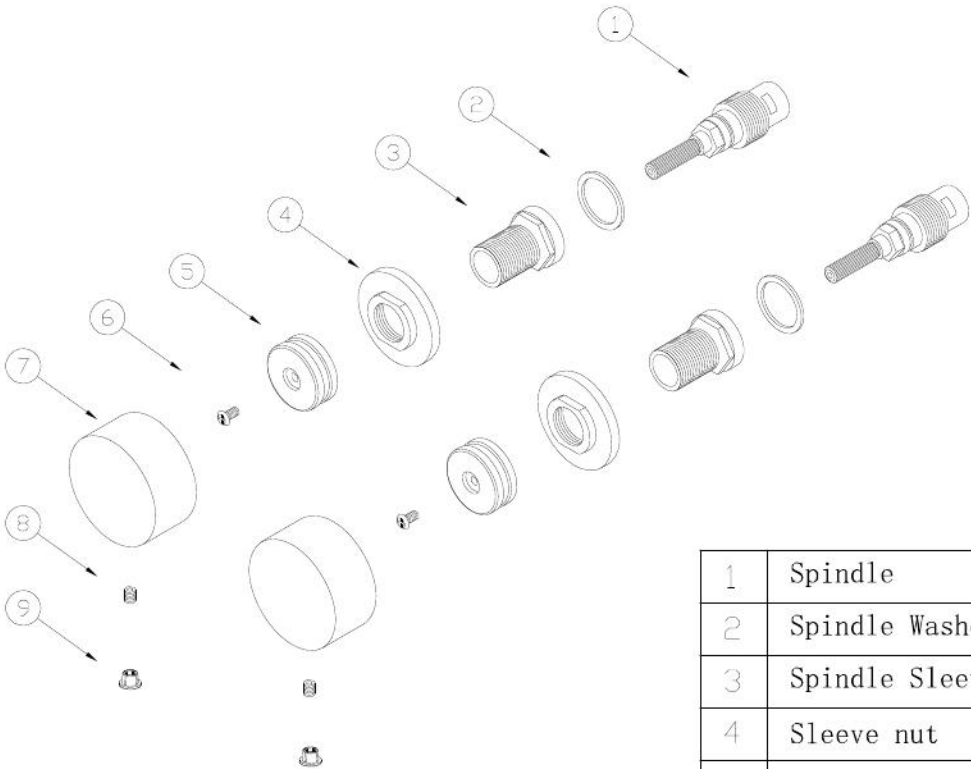
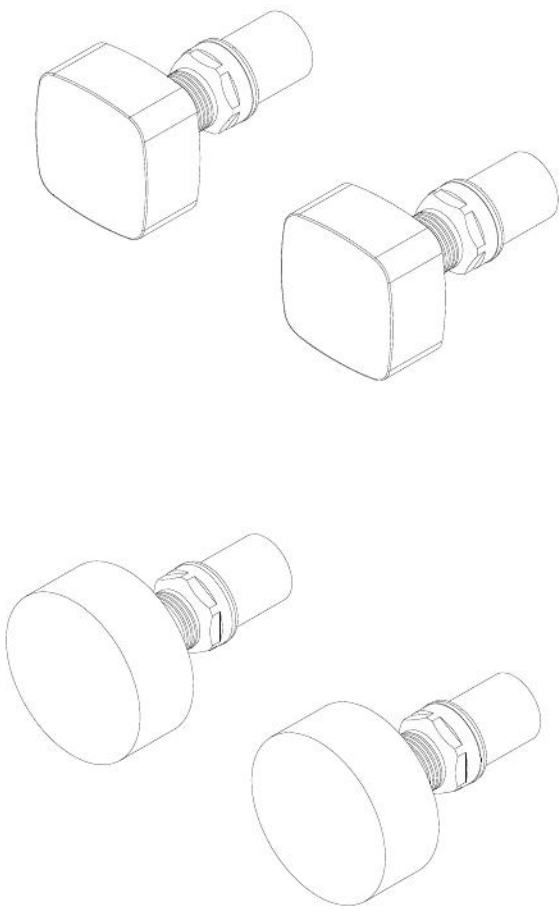


Mica Wall Top Assembly - TRIM KIT ONLY

ItemNo: WTA-R, WTA-SS
AUST-(0326)K.S


This product must be installed by a licensed Plumber

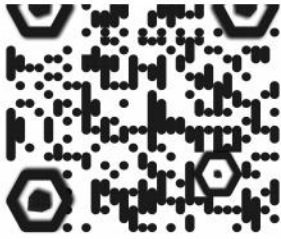

1	Spindle
2	Spindle Washer
3	Spindle Sleeve
4	Sleeve nut
5	Handle receiver
6	M4 Screw
7	Handle
8	M6 Screw
9	Cap

Step1

Flush pipes , install the spindles into the roughing and tighten .

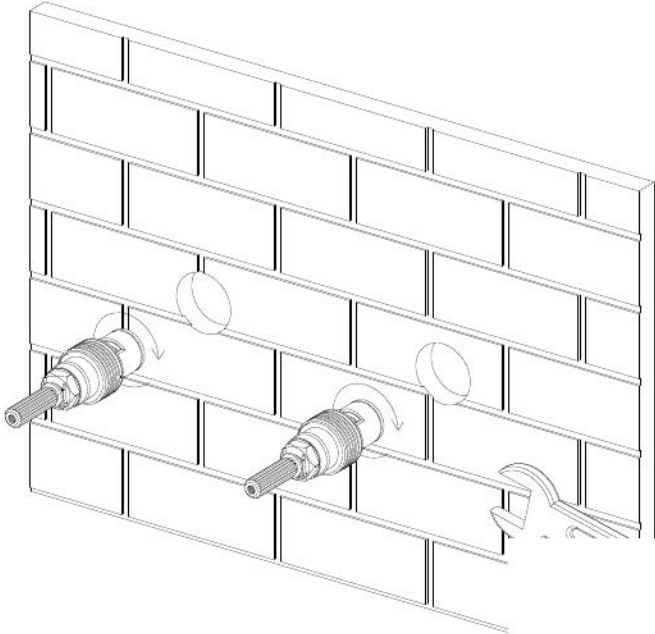

Step2

Insert the spindle washer and install the spindle sleeve.

